## Руководство по монтажу ERV:

Соединители для труб ELAFLEX поставляются готовыми к монтажу. Стандартные фланцы вращаются. Доп. прокладки не требуются. При монтаже обратите внимание на следующее:

Перед монтажем проверьте, чтобы уплотнительная поверхность контрфланцев была гладкой. Не должно быть выступающих концов трубы, выемок и пружин, так как они могут разрушить уплотняющую поверхность компенсаторов для труб (см. "Указания для строителя" на стр. 404).

<u>Внимание</u>: при применении отогнутого края и следующего за ним вращающегося фланца внешний диаметр отогнутого края обязательно должен быть больше, чем уплотняющая поверхность компенсатора.

2) Обратите внимание на соответствующий монтажный пропуск: если пропуск слишком большой, монтаж компенсатора может привести к удлинению резинового сильфона и, таким образом, к незаметному отделению уплотнительной поверхности от фланцевой выемки (см. иллюстрацию). При последущем натяжении винтов уплотнительный валик был бы асиметрично раздавлен.

При монтаже - макс. допустимое удлинение: + 5 мм - макс. допустимое сжатие: - 10 мм

- ВНИМАНИЕ: большее удлинение при монтаже сокращает диапазон движения во время работы. Для сокращения монтажных пропусков мы можем поставить распорки.
- По возможности установите компенсатор так, чтобы была видна дата его изготовления.
- Установите винты со стороны компенсатора. Если это невозможно, рекомендуется минимальное расстояние между сильфоном и винтом "x"= 15 мм.
- Перекрестно закрепите винты. Не используйте инструменты с острыми краями, чтобы предотвратить повреждение резинового сильфона.
- При закреплении винтов между металлическими фланцами расстояние должно составлять не менее"у"= мин. 1 мм (см. рис.).
- Запрещается окрашивать резиновый сильфон компенсатора. Растворители могут повредить резину, кроме того, окрашенная поверхность будет мешать последующим инспекциям.

правильно

- При сварочных работах необходимо защищать резиновый сильфон от высокой температуры.
- 9) Температура должна быть не выше 90° С. В противном случае используйте защитный слой (см. на стр. 0421).
- 10) Компенсаторы имеют срок годности, поэтому время от времени их необходимо подвергать проверке (визуально на повреждения и с помощью надавливания - на затвердивание сильфона).

## Installation Hints for ERV Expansion Joints:

ELAFLEX expansion joints are provided ready for installation. The standard flanges can be turned into any desired position. Additional sealings are not necessary. For installation please observe the following:

 Prior to the installation of the expansion joints it is to be secured that the mating flanges have satisfactory sealing surfaces. Protruding hose ends, grooves and tongues are not permitted as the sealing surface of the expansion joints might be destroyed. (see hints for the pipework designer, page 4-12)

<u>Attention</u>: When using slip-on flanges the outside diameter must be larger than the sealing surface of the expansion joint.

2) Pay attention to the correct installation length: The pulling of expansion joints into operating spaces which are too large, lengthens the rubber bellow considerably and often leads to the collar being drawn out of the flange groove (see picture). During the following tightening of the screws the collar would be crushed asymmetrically.

When installing - max. allowable lengthening: + 5 mm - max. allowable compression: - 10 mm

<u>Please note</u>:

A bigger lengthening during installation decreases the allowable range of movement during operation. To shorten installation gaps, distance flanges are available.

 If possible, the expansion joints, should be installed in such a way that the date of production is visible.

A) Screws should be inserted from the expansion joint side. If this is not possible it should be observed by all means that in pressureless condition there remains a minimal distance "x" = 15 mm between rubber bellow and screw

Tighten the screws crosswise. Dot not use any sharp-edged tools which might damage the rubber bellow in case the tool slips.

- 6) When installing the expansion joints, the screws may only be tightened to an extent that between the metal flanges a distance "y" of at least 1 mm remains (see picture).
- 7) The rubber bellow of the expansion joint must not be painted ! Solvents can damage the rubber cover, furthermore the colour coat impedes inspection.

right

- 8) When welding and cutting, the rubber bellow is to be protected against heat by all means.
- 9) Permanent radiation heat above 90° C must be avoided. In case of need flame protection covers should be used (see page 0421).
- 10) Expansion joints are subject to wear and must be included in the routine inspection of the pipe system (visual inspection of the expansion joint regarding damages as well as inspection for induration by pushing in with a thumb).



= length + 5 mm